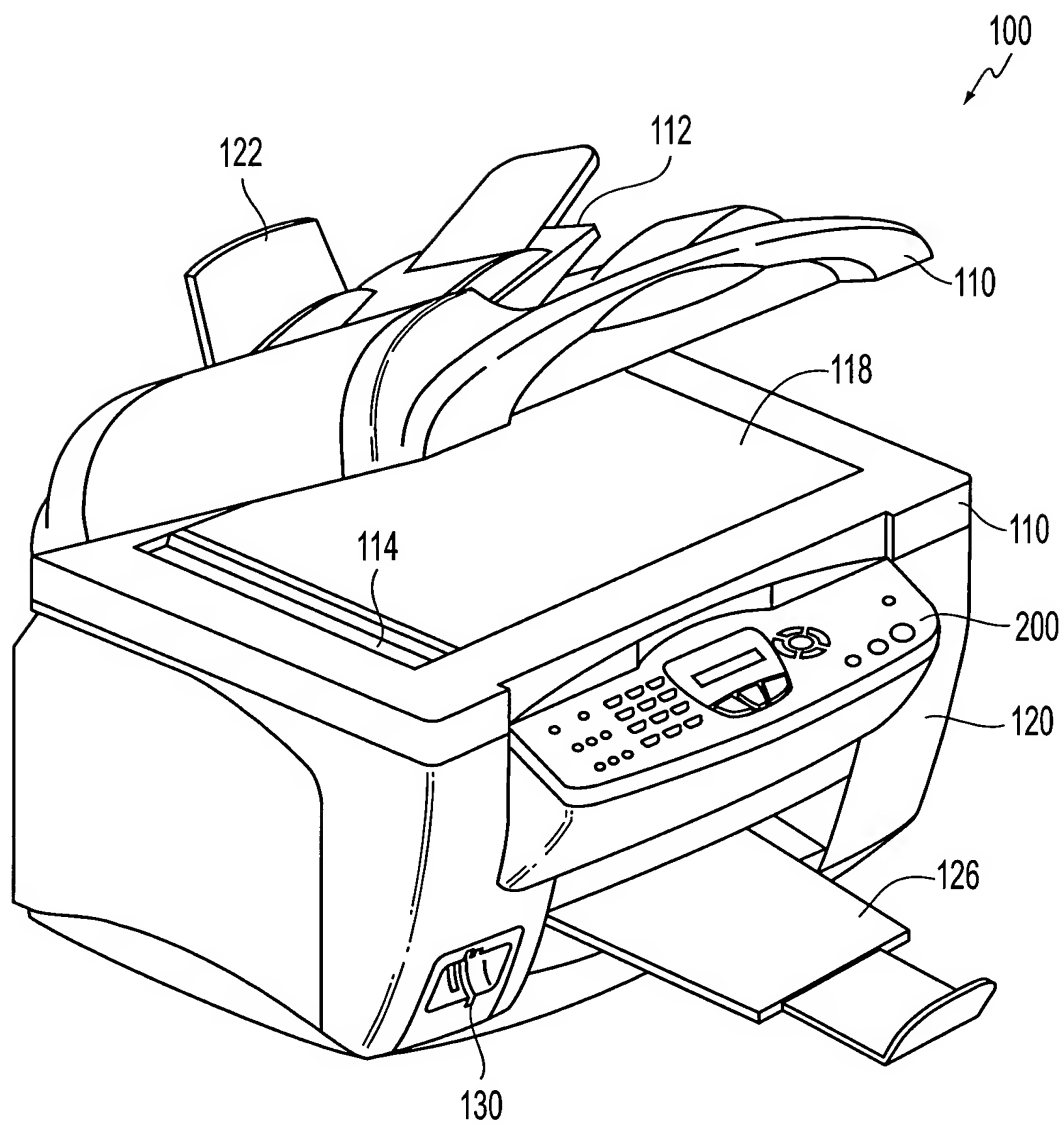 
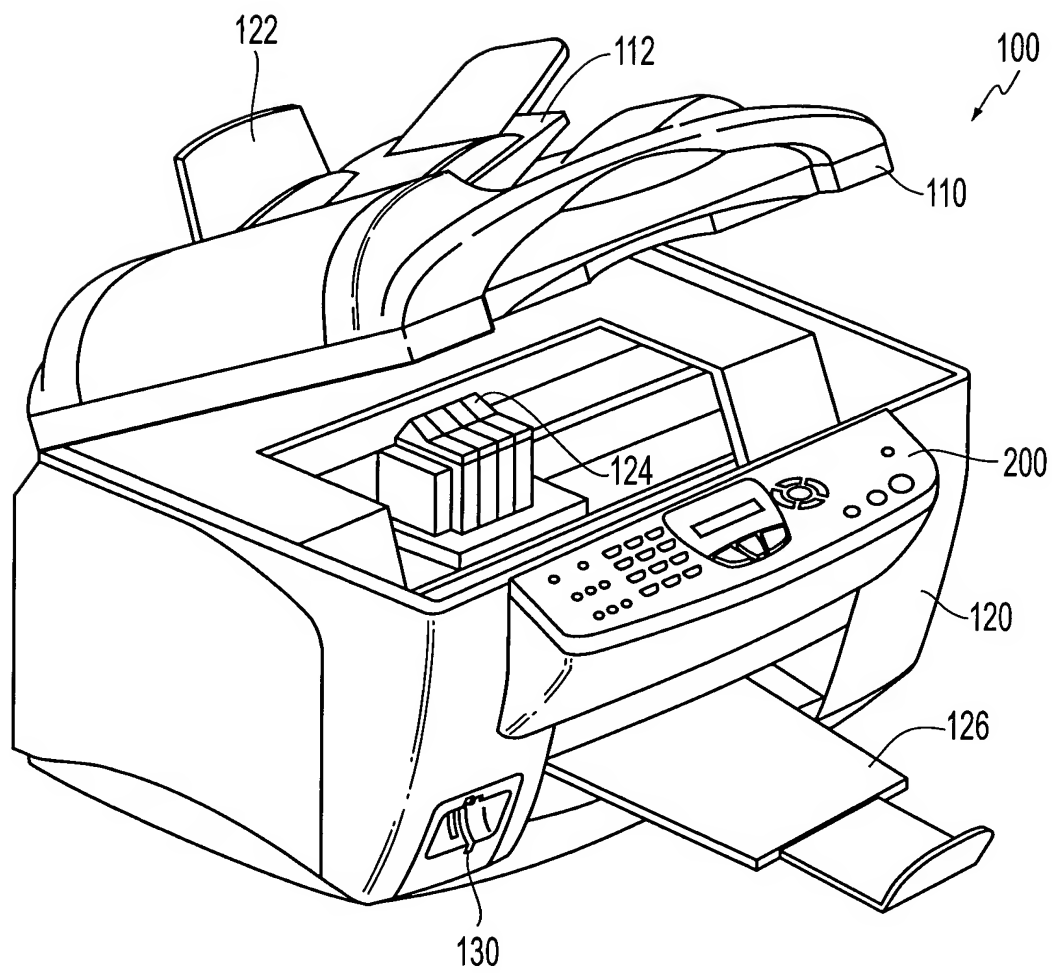 


Fig. 1



**FIG. 2**



**FIG. 3**

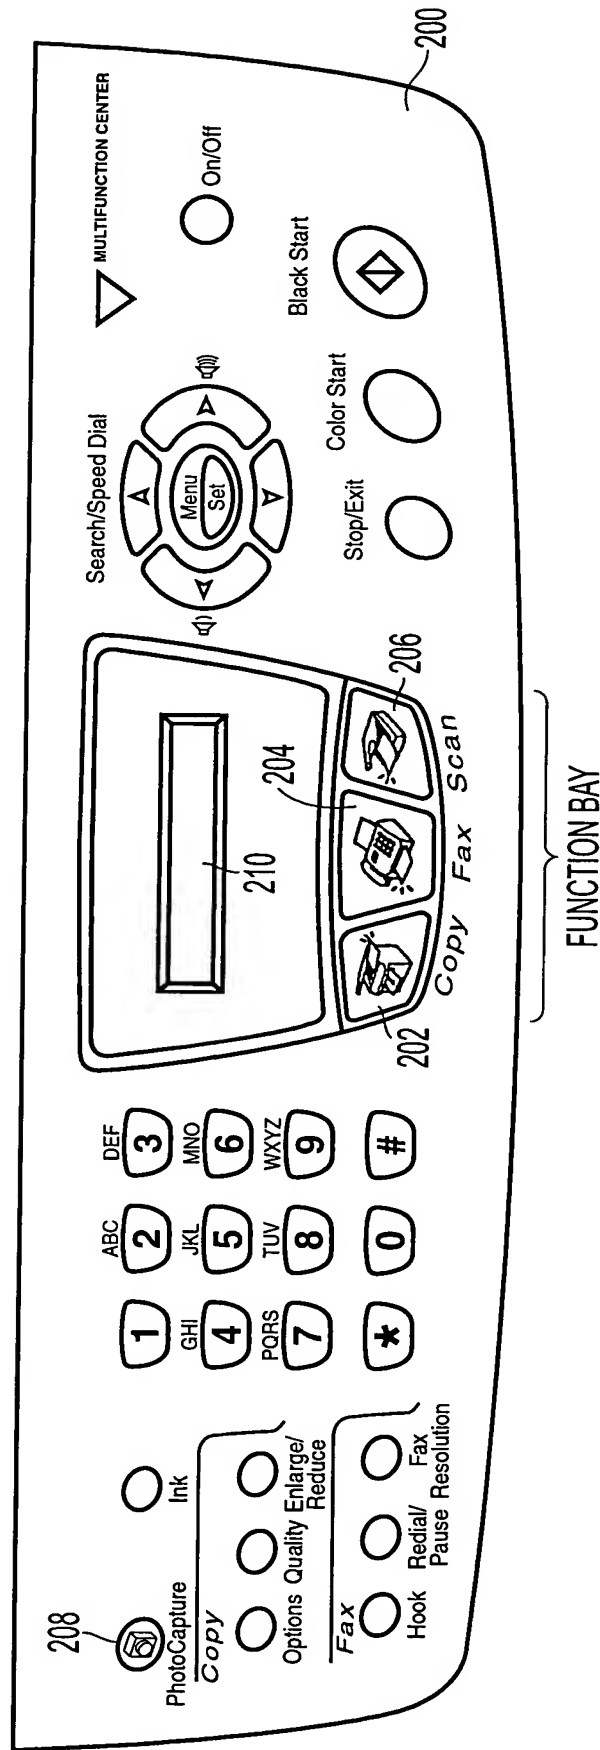 


FIG. 4

Fig. 5

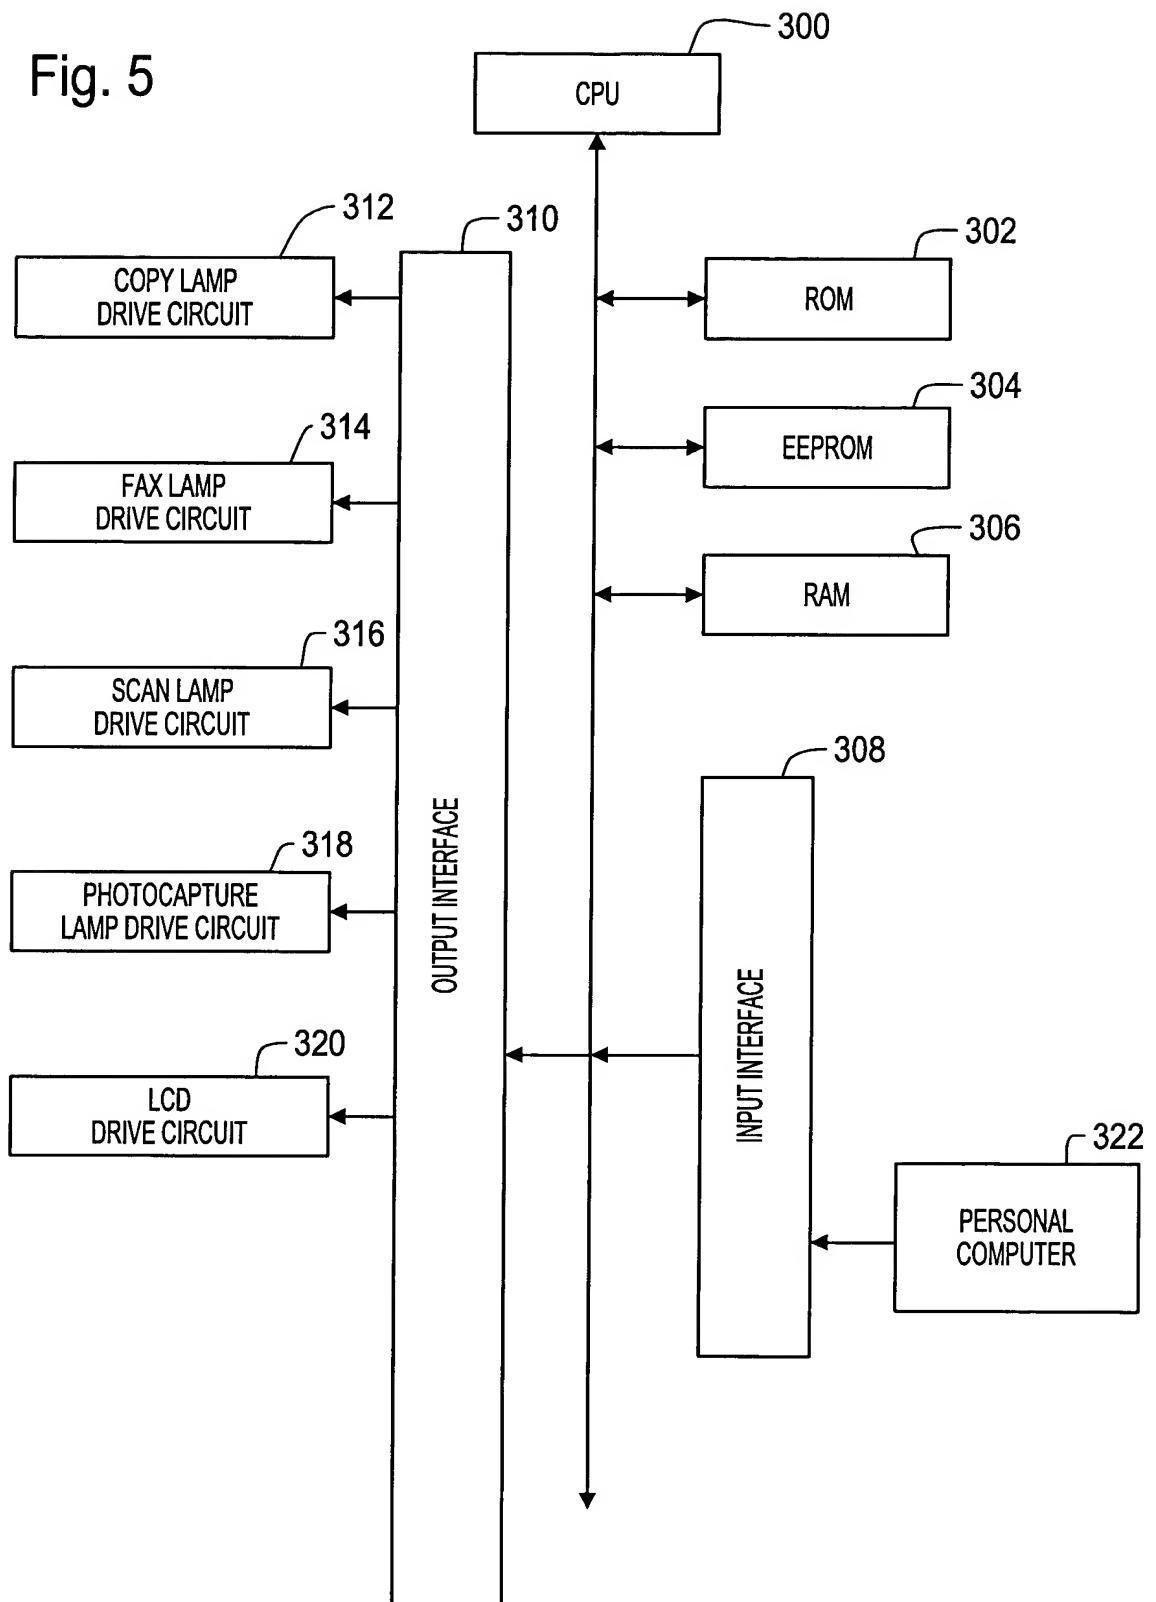 


Fig. 6

CONDITIONS	MEDIA CARD INSERTED	ACCESS LAMP STATUS			
		FAX	COPY	SCAN	PCC
DURING POWER-OFF	NO	○	○	○	○
	YES	○	○	○	○
DURING FAX MODE	NO	●	○	○	○
	YES	●	○	○	● OR ◎
DURING COPY MODE	NO	○	●	○	○
	YES	○	●	○	● OR ◎
DURING SCAN MODE	NO	○	○	●	○
	YES	○	○	●	● OR ◎
DURING PCC MODE	NO	○	○	○	○
	YES	○	○	○	● OR ◎

Fig. 7

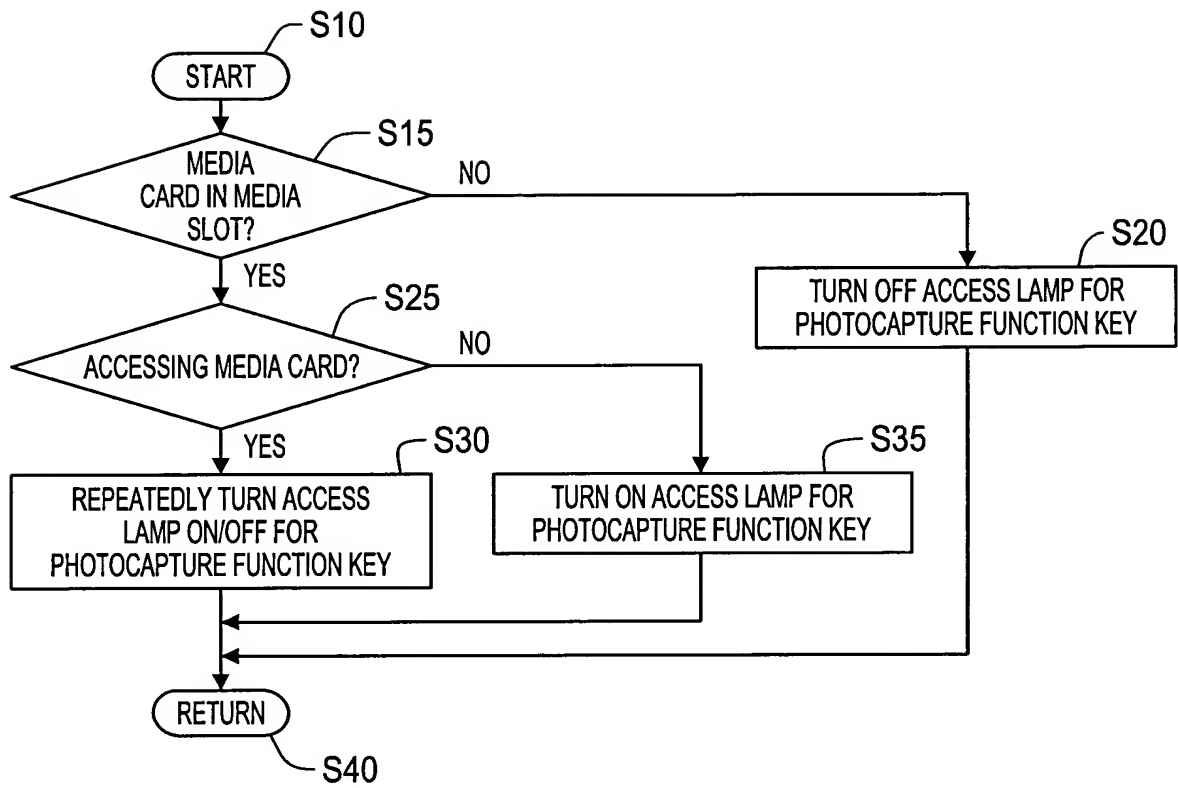 


Fig. 8

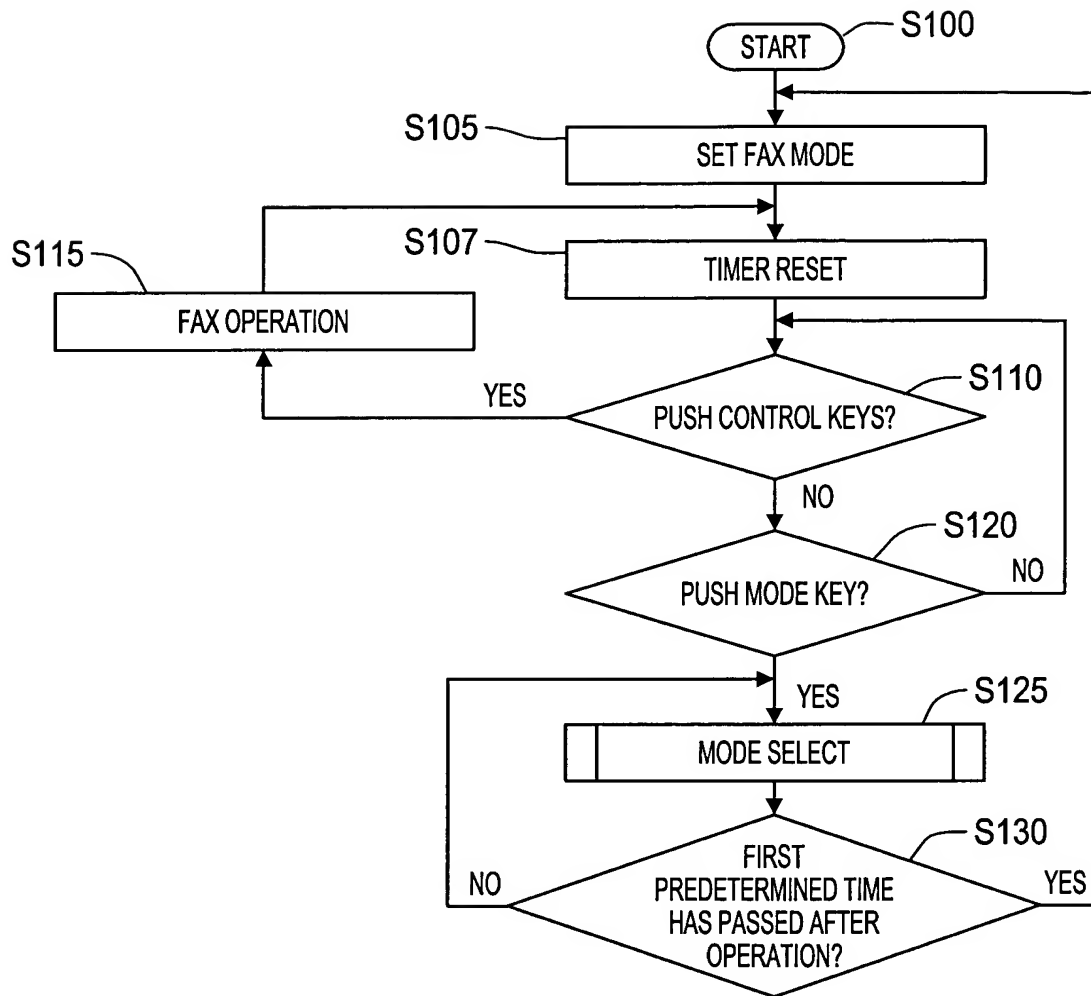 


Fig. 9

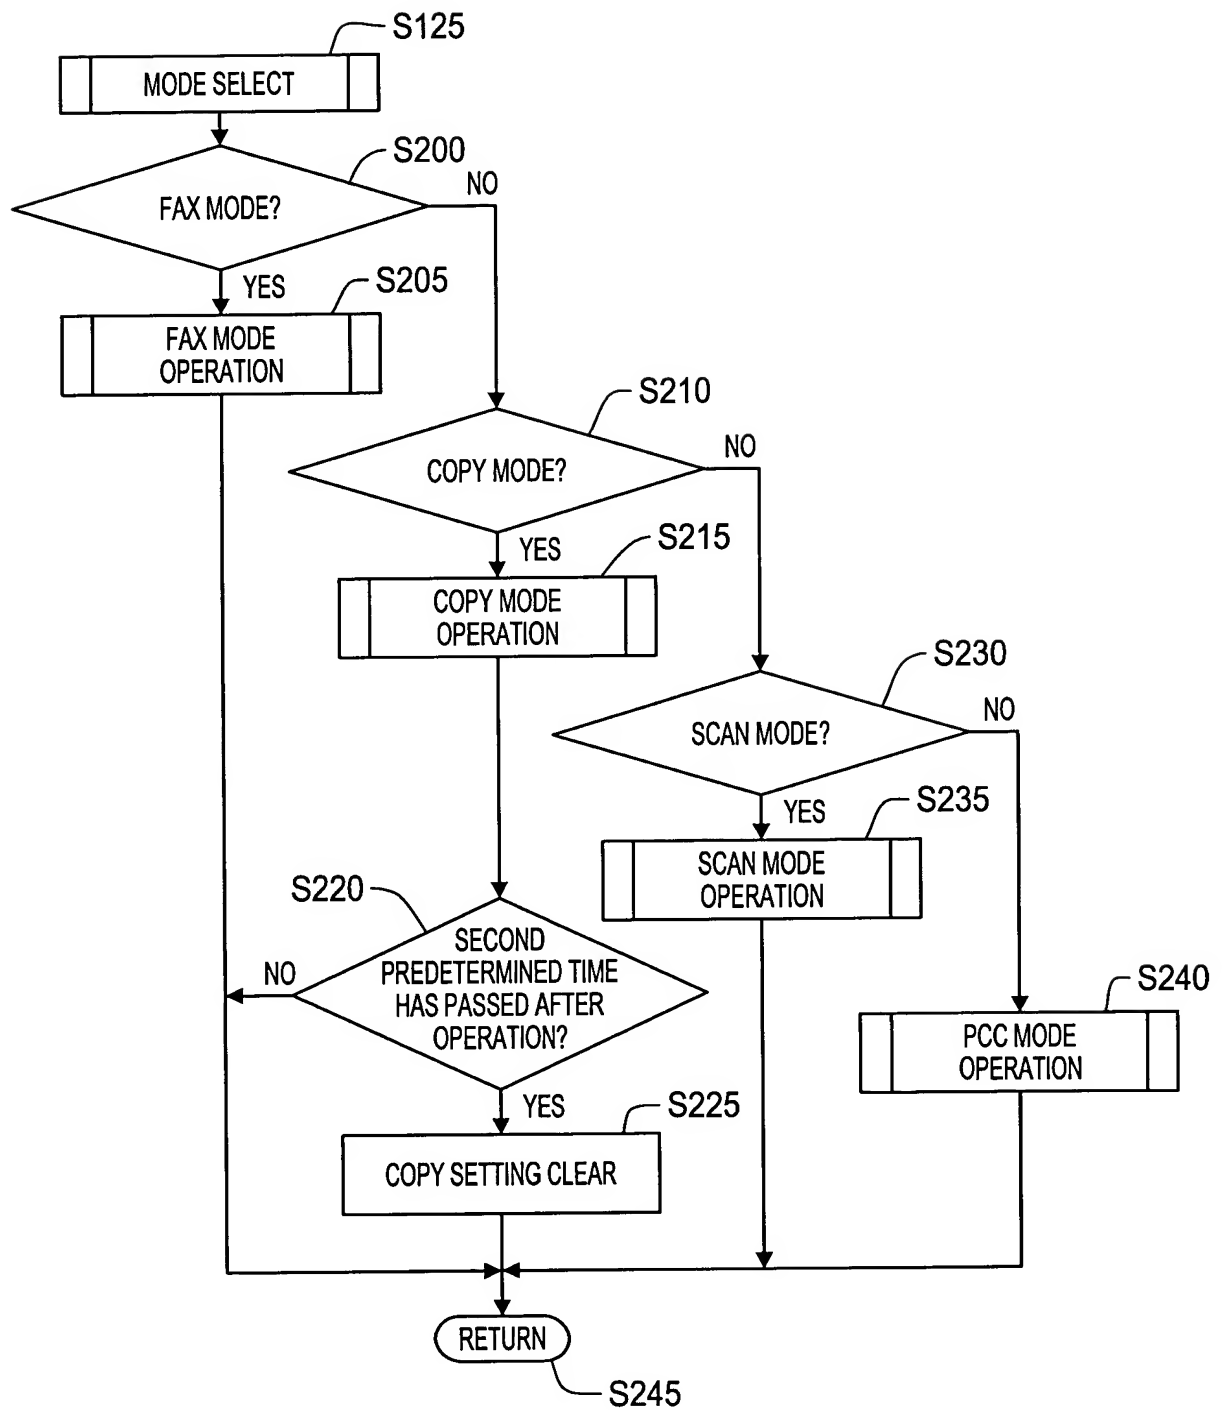 


Fig. 10

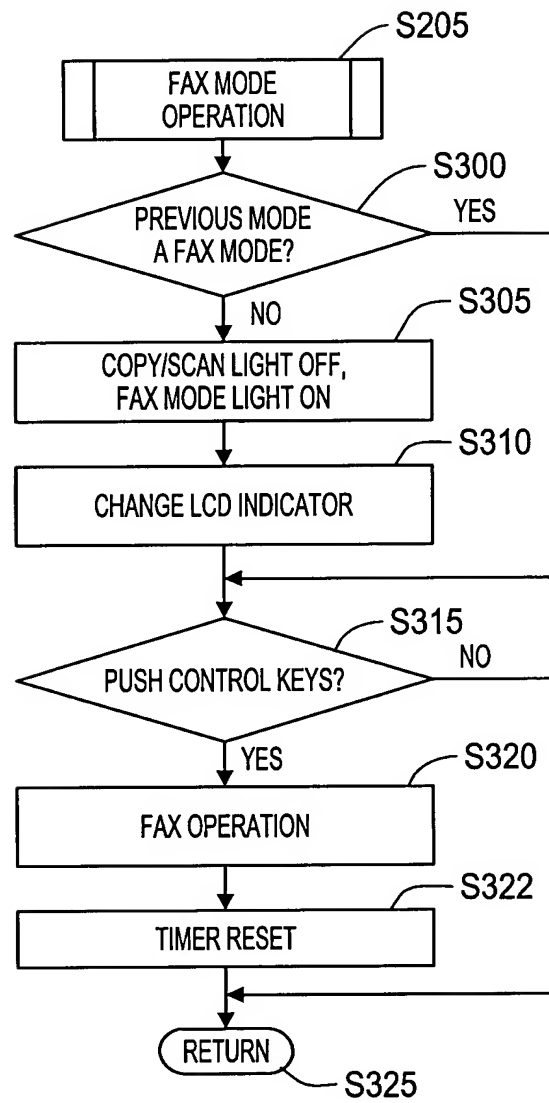 


Fig. 11

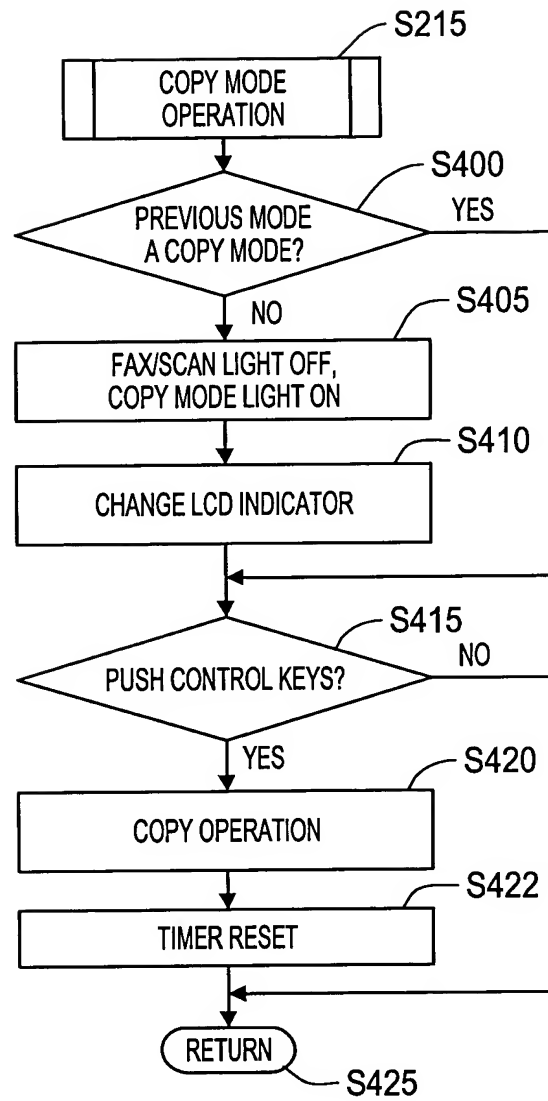 


Fig. 12

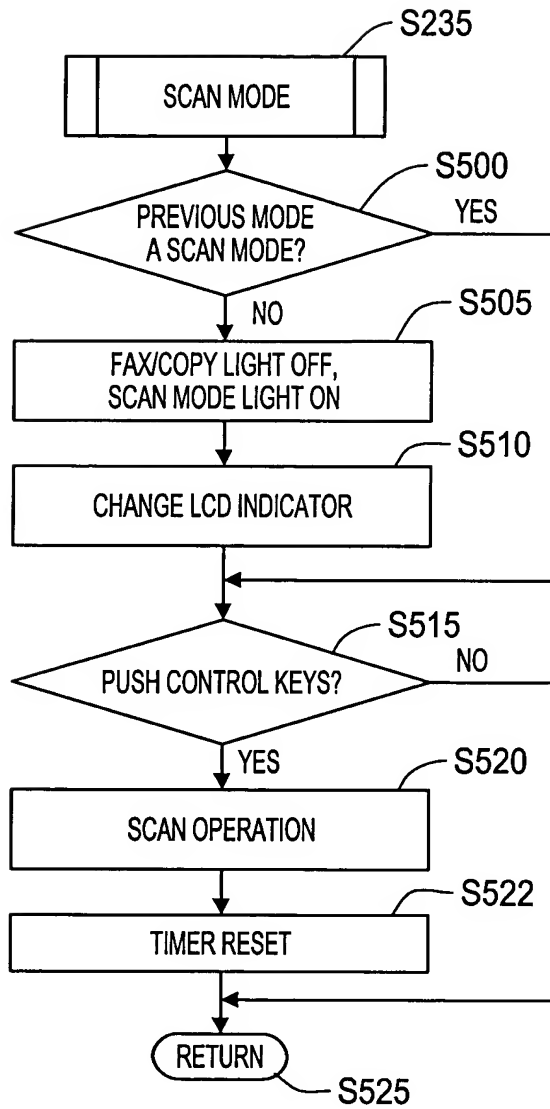 


Fig. 13

 
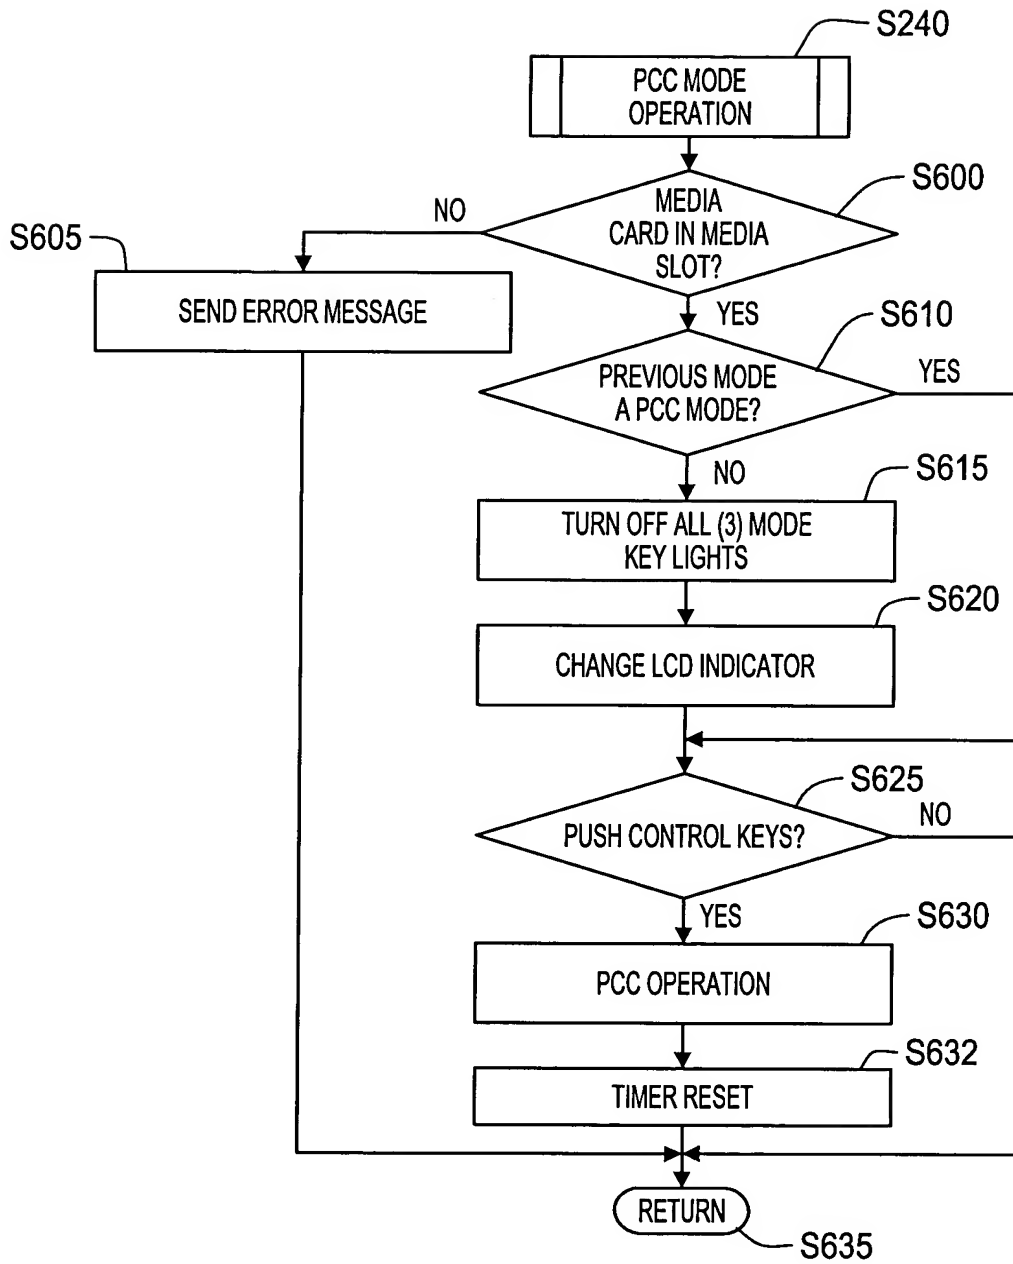 


Fig. 14

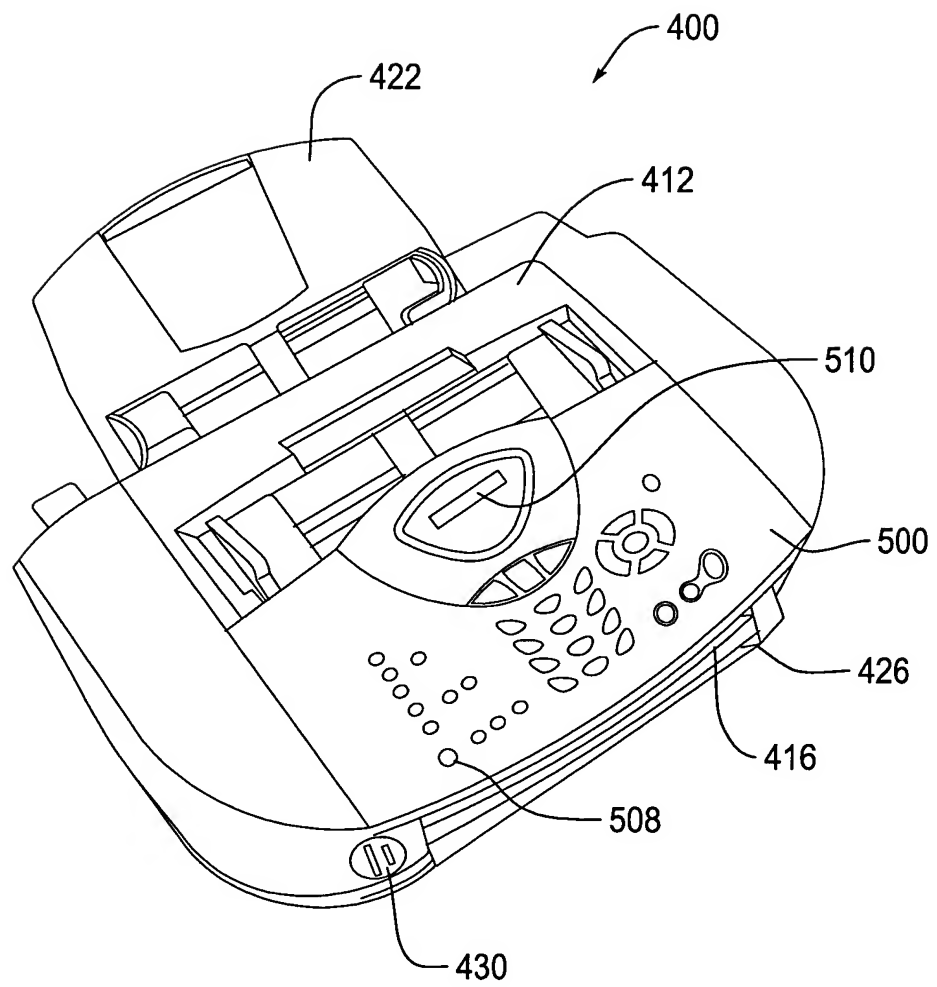

The diagram illustrates a control panel with the following components and labels:

- 510**: Points to the large, oval-shaped display screen on the left.
- 504**: Points to the **Fax** button, which features a fax machine icon.
- 506**: Points to the **Scan** button, which features a scanner icon.
- 502**: Points to the **Copy** button, which features a document with a copy icon.
- 508**: Points to the **Photo** button, which features a camera icon.
- 500**: Points to the entire control panel area.

Other visible controls and labels include:

- Print** button with an ink icon.
- Copy** button with an options icon.
- Fax** button with a resolution icon.
- Photo** button with a capture icon.
- Shift** button.
- Options** button.
- Quality** button.
- Pause/Hook** button.
- Redial** button.
- Black Start** button.
- Color Start** button.
- Stop/Exit** button.
- Search/Speed Dial** button.
- Volume** button.
- On/Off** button.
- 1-9, \*, #** numeric keypad.
- abc, def, mno, wxyz, ijkl, tuv, pqrs** letter associations for the numeric keypad.
- Set** button.
- 1-8** buttons on the left side of the panel.
- Ink** label.
- Resolution** label.
- Photo Capture** label.
- Pause/Hook** label.
- Redial** label.
- Options** label.
- Quality** label.
- Copy** label.
- Print** label.
- Fax** label.
- Scan** label.
- Copy** label.

508